



Portable wireless speaker

HD-Go




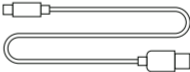
User's Manual

Please read this manual
before using the product

Thank you for choosing TREBLAB HD-Go!


This speaker provides superior sound quality and mobility, combined with rugged construction and the convenience of hands-free wireless operation.

WHAT'S IN THE BOX

1. A line drawing of the TREBLAB HD-Go speaker, which is an oval-shaped device with a carrying loop on the right side and the brand name 'TREBLAB' printed on the front.
2. A line drawing representing a user manual and a quick start guide, shown as two overlapping document pages.
3. A line drawing of a circular Type-C charging cable with a stylized logo in the center.
4. A line drawing of a long, thin rectangular sticker with rounded ends, featuring the TREBLAB logo in the center.

- HD-Go**
1. TREBLAB HD-Go speaker
 2. User's manual and quick start guide
 3. Type-C charging cable
 4. TREBLAB logo sticker

BUTTONS AND PARTS

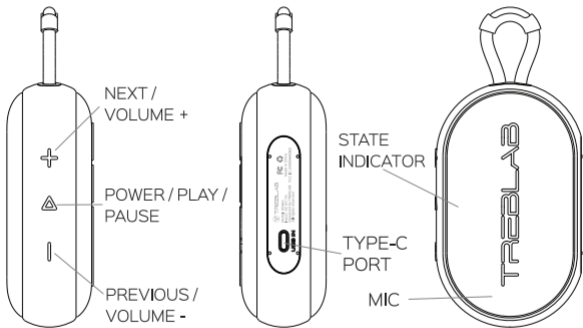

SPEAKER FUNCTION

Function	Operation
Power ON	Press and hold the PLAY button for 2 seconds.
Power OFF	Press and hold the PLAY button for 3 seconds.
Play/Pause	Press the PLAY button.
Volume +	Press the VOLUME + button.
Volume -	Press the VOLUME - button.
Previous track	Press and hold the VOLUME - button for 1 second.
Next track	Press and hold the VOLUME + button for 1 second.
Answer a phone call	Press the PLAY button during an incoming call.
Reject a phone call	Press and hold the PLAY button for 2 seconds during incoming call.
End a phone call	Press the PLAY button when on a call.

Function	Operation
Switch call output between speaker / phone earpiece	Double-press the PLAY button when on a call.
Enter / exit TWS pairing mode	Double-press the PLAY button.
Disconnect	Simultaneously press and hold the VOLUME + and VOLUME - buttons for 3 seconds when connected to a device.
Factory reset	Simultaneously press and hold the VOLUME + and VOLUME - buttons for 3 seconds when not connected to a device.

SETTING UP YOUR SPEAKER

Turn on

Press and hold the **PLAY** button for 2 seconds. You will hear the sound cue, and the BLUE state indicator will start flashing.

Turn off

Press and hold the **PLAY** button for 3 seconds. You will hear the sound prompt, and the state indicator will blink 3 times and will go off.

WIRELESS PAIRING

Make sure **TREBLAB HD-Go** is charged.

- Turn on the speaker by pressing and holding the **PLAY** button for 2 seconds. You will hear the sound cue, and the state indicator will start flashing BLUE, meaning that the speaker is in pairing mode.
- Activate the wireless communication function on your device (smartphone, tablet, laptop).
- Select **TREBLAB HD-Go** from the available devices list. Keep it within 3 feet / 1 meter of the speaker while pairing.
- If necessary, enter passcode 0000.
- Once **HD-Go** is successfully paired and connected, the LED will stop flashing and stay BLUE.

RE-CONNECTING

After the initial pairing, the speaker will automatically connect to the previously paired device when turned on again. If reconnection does not happen automatically, the speaker will start looking for any other previously paired device within the effective distance range. **TREBLAB HD-Go** can remember up to 6 recently paired devices.

TRUE WIRELESS STEREO (TWS) - PAIRING TWO SPEAKERS

The TWS technology allows you to use two speakers paired wirelessly to create a wireless dual-channel system, delivering a true stereo sound effect. While using this function, one speaker (Primary, left channel) is paired with a smart device, the other (Secondary, right channel) speaker is paired with the Primary speaker.

- Turn ON both speakers and make sure that none of them is connected to any device (both speakers' status indicators should blink BLUE). To disconnect, simultaneously press and hold the **VOLUME +** and **VOLUME -** buttons for 3 seconds.
- Select the speaker that will connect to the device (Primary) and double-press the **PLAY** button on it. You should hear the ascending two-tone sound prompt.
- Place the Primary and Secondary speakers near each other (the distance should not be over 3 feet / 1 meter). The Secondary speaker should connect to the Primary one automatically. The state indicator on the Secondary speaker will be steady BLUE, the state indicator on the Primary speaker will be blinking BLUE.
- Pair the Primary speaker with your device.

To interrupt the TWS function, double-press the **PLAY** button on either speaker. You will hear the descending two-tone sound prompt, and the state indicator on the Secondary speaker will start blinking BLUE, meaning that the connection is lost.

AUDIO PLAYBACK

To pause and resume playback when connected wirelessly, press the **PLAY** button.

To adjust the volume, press the **VOLUME +** or the **VOLUME -** button while listening to music.

To change the track on the **HD-Go**, press and hold the **VOLUME +** or the **VOLUME -** button for 1 second.

PHONE CALLS

TREBLAB HD-Go can be used to make and receive phone calls when connected wirelessly. Audio playback will be paused during calls.

To answer a call: Press the **PLAY** button during an incoming call.

To end a call: Press the **PLAY** button when on a call.

To reject a call: Press and hold the **PLAY** button for 2 seconds during an incoming call.

Switch call output between speaker / phone earpiece: Double-press the **PLAY** button when on a call.

NOTE: For better call quality, face the microphone when you speak.

CHARGING

When the battery is running low, you will hear a sound signal reminding a busy tone and the state indicator will be blinking RED.

To charge the speaker, plug one end of the supplied cable into the TYPE-C charging port on the bottom of the speaker. Plug the other end of the charging cable into a wall adapter or USB port of a laptop.

Once plugged in, the state indicator will turn RED if the speaker is turned off or the PURPLE if the speaker is on and connected. When the speaker is charged, the RED light will go off if the speaker is turned off or PURPLE light will turn BLUE if the speaker is on and connected. It takes up to 3 hours to fully charge the speaker.

Unplug **HD-Go** from the charging cable and the cable itself from the power source when not in use.

If the speaker is left unused, even the fully charged battery will lose its charge over time.

We recommend fully charging the **HD-Go** speaker at least twice a month to maintain sufficient battery life.

TROUBLESHOOTING

Problem	Solution
Not powering on	<p>Make sure the speaker is fully charged. Charge for 2 hours, if necessary. Press and hold the PLAY button for 3 seconds.</p>
Not pairing	<p>Make sure the speaker is not paired with any other device, as it can only pair with one device at a time.</p> <p>Press the VOLUME + and VOLUME - buttons simultaneously and hold for 3 seconds. This will force the speaker to forget previously paired devices. Repeat the steps for pairing as previously described.</p>
Not finding a wireless driver on your laptop	<p>Make sure your laptop supports wireless connections. If it doesn't you will need an external wireless USB adapter compatible with your laptop. For further details, consult with your laptop manufacturer.</p>
Frequent disconnection and noise	<p>Ensure that the distance between your device and the speaker is less than 30 feet / 10 meters. Ensure that nothing is blocking the signal between your device and the HD-Go. Check if the speaker is running out of power.</p>

SAFETY RULES

- Don't disassemble or modify your speaker for any reason. Doing this may cause the speaker to malfunction or become combustible. The damage to your device can void the warranty.
- Do not let your device get wet - liquids can cause serious damage. Water damage to your device can void the warranty.
- Make sure the speaker is completely dry before charging.
- Clean only with a dry doth.
- Avoid exposing **TREBLAB HD-Go** to extreme temperatures (below 37°F/3°C or above 112°F/45°C). Extreme temperatures can cause the deformation of the **HD-Go** components and reduce the battery life and the lifespan of your new speaker.
- Don't put the device's LED lights close to humans' or animals' eyes.
- Do not use **HD-Go** during a thunderstorm. Thunderstorms can cause serious malfunction and increase the risk of electric shock.

FCC STATEMENTS

FCC Compliance Statement - Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement - Part 15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator & your body.

SPECIFICATIONS

Speaker size:	45 mm
Charging port:	TYPE-C
Dimensions:	2.87 x 4.80 x 1.77 inches / 73 x 122 x 45 mm
Weight:	0.45 lbs / 206.5 g

RECYCLING

The speakers can be recycled, and they should be in order to keep our planet clean. Where should you bring them?

In the **US**, there are a couple of options:

<https://www.call2recycle.org>

<https://search.earth911.com>

<https://recyclenation.com/find>

<https://www.cta.tech/Consumer-Resources/Greener-Gadgets>

In **Canada**, please visit the links below:

<https://thinkreuse.net>

<https://www.callerecycle.ca>

In the **UK**, please visit the links below:

<https://www.recycle-more.co.uk/>

<https://www.recyclenow.com/local-recycling>

THANK YOU

We truly appreciate that you chose **TREBLAB** as your trusted brand of wireless speakers and sincerely hope you enjoy the great sound and seamless usability **TREBLAB HD-Go** provides.

We love making our customers happy by providing true value with our products. If for any reason you are not completely satisfied with your purchase or have any questions, please visit **https://treblab.com/contact_us**.

We care about our customers most of all and are always here to help you.



TREBLAB

1 YEAR FULL WARRANTY
Parts & Labor Warranty

Please visit www.treblab.com
to register YOUR product.
Designed by Productech in the U.S.

Wireless speaker
HD-Go



Made in China



WARNING: This product can expose you to Bisphenol A, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov