



Wireless headphones

**C7**

 
## **User's Manual**

Please read this manual  
before using the product

## Thank you for choosing the TREBLAB C7!

Our headphones provide superior sound quality and mobility thanks to their light-weight construction and convenient hands-free wireless operation. Before using this product, please read this manual.

### WHAT'S IN THE BOX




1. TREBLAB C7  
headphones

2. TREBLAB logo sticker

3. User's manual &  
quick start guide

4. Charging cable

## BUTTONS AND PARTS

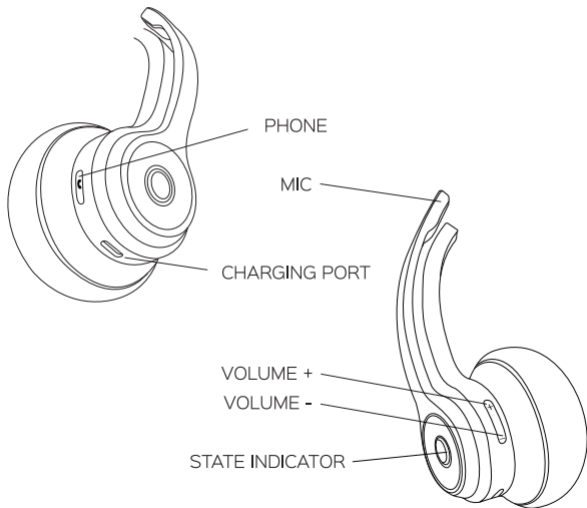

<b>Function</b>	<b>Operation</b>
Power on	Press the <b>PHONE</b> button and hold for 2 seconds.
Power off	Press the <b>PHONE</b> button and hold for 3 seconds.
Pause / Play	Press the <b>PHONE</b> button once.
Volume +	Press the <b>VOLUME +</b> button.
Volume -	Press the <b>VOLUME -</b> button.
Next track	Press and hold the <b>VOLUME +</b> button for 1 second.
Previous track	Press and hold the <b>VOLUME -</b> button for 1 second.
Answer a phone call	Press the <b>PHONE</b> button during the incoming call.
Reject a phone call	Press and hold the <b>PHONE</b> button for 1 second during the incoming call.
Hang up	Press the <b>PHONE</b> button when on a call.

<b>Function</b>	<b>Operation</b>
Mute/unmute the microphone	Double-press the <b>PHONE</b> button.
Voice assistant activation	Press the <b>PHONE</b> button three times.
Gaming mode	Press the <b>PHONE</b> button four times.
Disconnect	Press the <b>VOLUME +</b> and <b>VOLUME -</b> buttons simultaneously for 3 seconds when <b>connected</b> to the device.
Factory reset	Press the <b>VOLUME +</b> and <b>VOLUME -</b> buttons simultaneously for 3 seconds when <b>not connected</b> to the device.

## SETTING UP YOUR TREBLAB C7

### To turn on the headphones

Press and hold the **PHONE** button for 2 seconds. You will hear two sound prompts, the blue state indicator will light up and, a few seconds later, the state indicator will start flashing blue/red indicating that the headphones are on and ready to pair.

### To turn off the headphones

Press and hold the **PHONE** button for 3 seconds. You will hear the sound prompt, the red state indicator will light up and will go off.

## PAIRING

Make sure that the **TREBLAB C7** headphones are charged.

1. Press and hold the **PHONE** button for 2 seconds. You will hear two sound prompts, the blue state indicator will light up and, a few seconds later, the state indicator will start flashing blue/red.
2. Activate the wireless communication function on your smart device, scan/search for **TREBLAB C7**, and click **CONNECT**.

3. If prompted by your device to connect, select Yes.
4. You will hear the sound prompt indicating that the headphones are connected. The state indicator will start flashing blue every 15 seconds.

When you turn the headphones on, they will try to reconnect with the recently connected device. If the reconnection does not happen automatically, the headphones will try to find the next device in the pairing list. You can only connect and play audio from one device at a time. But you can save up to 6 connected

## **GAMING MODE**

**TREBLAB C7** headphones support the gaming mode to reduce the audio latency up to 100ms. This allows to achieve better video / audio synchronization and improve your gaming and video-watching experience.

1. To enable the gaming mode, press the **PHONE** button four times. You will hear the ascending sound prompt and feel the lower latency while gaming / watching videos.
2. To disable the gaming mode, press the **PHONE** button four times again. You will hear the descending sound prompt and the latency will go back to the standard 200ms.

**NOTE** In the gaming mode, the connection range is much shorter than in standard one, so, if you are experiencing some

connection issues or drops, please make sure to disable the gaming mode.

## AUDIO PLAYBACK

To pause and resume the playback, press the **PHONE** button once.

To change tracks on **C7**, press and hold the **VOLUME +** button for 1 second to play the next track and press and hold the **VOLUME -** button for 1 second to play the previous track.

To adjust the volume, the **VOLUME +** button once to increase the volume and press the **VOLUME -** button once

## PHONE CALLS MANAGEMENT

The **TREBLAB C7** were specifically designed for the phone/conference calls. Note that the audio playback will be paused during calls.

<b>To answer a call:</b>	Press the <b>PHONE</b> button during the incoming call.
--------------------------	---

<b>To reject a call:</b>	Press and hold the <b>PHONE</b> button for 1 second during the incoming call.
--------------------------	---

**To end a call:**

Press the **PHONE button** when on a call.

**Redial:**

Double-press the **PHONE button**.

**Mute/unmute mic:**

Double-press the **PHONE button** when on a call.

## VOICE ASSISTANTS SUPPORT

**TREBLAB C7** headphones are compatible with the most of the voice assistants. To use a voice assistant, press and the **PHONE button** three times.

## CHARGING

When the headphones' battery is running low, you will hear the sound prompt reminding a busy tone.

To charge the **C7** headphones, plug the supplied cable into the Type-C charging port on the ear-cup and the other end of the charging cord into a standard USB port. The state indicator will turn red.

It takes up to 2.5 hours to charge **TREBLAB C7**. When the headphones are charged, the red light will turn blue.

## **RESET TO THE FACTORY SETTINGS**

You can reset the **C7** headphones to the factory default settings by cleaning up the pairing list with the last 6 connected to **C7** devices.

Make sure that the headphones are disconnected from the source device. Simultaneously press and hold the **VOLUME +** and **VOLUME -** buttons for 3 seconds.

You will hear the sound prompt and the headphones will go to the pairing mode.

## TROUBLESHOOTING

Problem	Solution
<b>Can't turn on the headphones</b>	Please make sure the headphones are charged, if not – charge them for 2.5 hours and try again.
<b>Headphones do not charge</b>	Clean the Type-C ports on the headphones a small brush. Try charging with another Type-C cable, power source, adaptor (if available).
<b>Frequent disconnection and noise</b>	Make sure that the distance between your device and the headphones is less than 33 feet / 10 meters. Make sure that nothing is blocking the signal between your device and your <b>C7</b> headphones. If the headphones are on, but disconnected from the device for longer than 15 minutes, they will turn off automatically to save power.

**Device  
doesn't find  
TREBLAB  
C7**

Make sure the **C7** headphones are not paired with any other device, as they can pair only with one device at a time.

If **C7** are in pairing mode and flash blue/red, but still are not found by your device, please restart your device and the headset.

Reset your headphones to the factory settings by following the steps from the section "RESET TO THE FACTORY SETTINGS". Try to pair again.

**I cannot  
find a  
wireless  
driver for  
on my  
laptop**

Make sure your laptop supports wireless connection. If it doesn't, you will need an external wireless USB adapter compatible with your laptop. For further details, consult with your laptop manufacturer.

## SAFETY RULES

- Never disassemble or modify your **C7** for any reason. Doing this may cause the device to malfunction or even become combustible. The damage to your device can void your manufacturer's warranty.
- Do not charge the headphones when they are wet. Make sure to dry off the headphones before charging.
- Avoid exposing the **TREBLAB C7** to extreme temperatures (below 37°F / 3°C or above 112°F / 45°C). Extreme temperatures can deform the components inside the **C7**, reducing the battery life and the lifespan of your new headphones.
- Avoid putting the device's LED lights close to the eyes of children or animals.
- Do not use your **C7** during a thunderstorm. Thunderstorms could cause them to seriously malfunction and increase the risk of electric shock.

## **FCC STATEMENTS**

### **FCC Compliance Statement - Part 15**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **FCC Interference Statement - Part 15**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

### **RF Exposure Information**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## **BATTERY INFORMATION**

- Your device is powered by rechargeable battery.
- Unplug the headphones from the power source when fully charged.
- If left unused, a fully charged battery will lose its charge over time.
- We recommend that you fully charge your headphones twice a month to ensure the battery's integrity.
- Please do not leave the headphones in hot or cold places, such as inside a closed car in the summer or winter as this will reduce the capacity and life of the battery.
- Do not expose the battery to fire as it may explode.
- Battery may also explode if damaged.

## RECYCLING

Your damaged or broken earphones can be recycled and we encourage you to do so to keep our planet clean. Where can you go to do this?

In the **US**, there are a couple of options:

<https://www.call2recycle.org>

<https://search.earth911.com>

<https://recyclenation.com/find>

<https://www.cta.tech/Consumer-Resources/Greener-Gadgets>

In **Canada**, please visit the links below:

<https://thinkreuse.net>

<https://www.call2recycle.ca>

In the **UK**, please visit the links below:

<https://www.recycle-more.co.uk/>

<https://www.recyclenow.com/local-recycling>

## SPECIFICATIONS

<b>Speaker unit:</b>	Ø30mm, 32Ω
<b>Charging port:</b>	USB Type-C
<b>Dimensions:</b>	168 x 154 x 68 mm / 6.61 x 6.06 x 2.67 in
<b>Weight:</b>	87 g / 0.19 lb / 3.04 oz

## THANK YOU

We truly appreciate that you chose **TREBLAB** as your trusted brand of wireless earphones. Our team sincerely hopes that you enjoy the great sound and seamless usability the **TREBLAB C7** provides.

We love making our customers happy by providing true value with our products. If for any reason you are not completely satisfied with your purchase or have any questions, please let us know by contacting us at [http://treblab.com/contact\\_us](http://treblab.com/contact_us).

We care about our customers above all and are always here to serve you.



TREBLAB

**1 YEAR WARRANTY**  
**Parts and Labor Warranty.**

Please visit [www.treblab.com](http://www.treblab.com) to register  
YOUR product.

Designed by Productech in the U.S.

Wireless headphones

**C7**



Made in China



WARNING: This product can expose you to Bisphenol A, which is known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)