



H3™

Running Man Combo Exit Sign



SKU	Model #
155391	JRMECW

The H3 LED Running Man Combo Exit Sign from Beyond LED Technology is a reliable and efficient emergency lighting solution designed for safety and compliance. Built with a durable thermoplastic housing, it combines an exit sign with adjustable emergency lamp heads for clear visibility in any situation. The built-in rechargeable battery provides dependable backup power during outages, ensuring safe evacuation when it matters most. With flexible mounting options, dual-face capability, and long-lasting LED performance, this exit sign is ideal for offices, schools, retail spaces, and commercial buildings.

Product Features


- 4W power
- 6000K CCT
- 90-min backup
- Single/Double face
- Input Voltage 120–347V AC
- 150+ lumens output
- ABS housing
- UL Listed safety
- 5-Year warranty

Running Man Combo Exit Sign



SKU: 155391 Specifications

Parameter	Description	Value
General Performance	Model	JRMECW
	Mode of operation	Non-Maintained
	Watt	6W
	Max Lumens	150
	Input Voltage	120/347V/60Hz
	Output Voltage	4.5VDC
	Output Power	4W
	Colour Temperature	6000K-7000K
	Battery	3.6V 1000mAh Ni-Cd Battery
	Max Charge Current (mA)	AC:110mA/DC:230mA
	Max Discharge Current (mA)	800mA
	Charging Time	24H
	Discharge Time	90Min
	LED	14 LEDs+2*1.2W LED lamp head
	Net Weight	2.7LBS
	Gross Weight	2.76LBS
	IP Rating	IP20
	Certification	UL Listed
	Warranty	Five years warranty for the electrical parts and housing; Three years warranty for battery

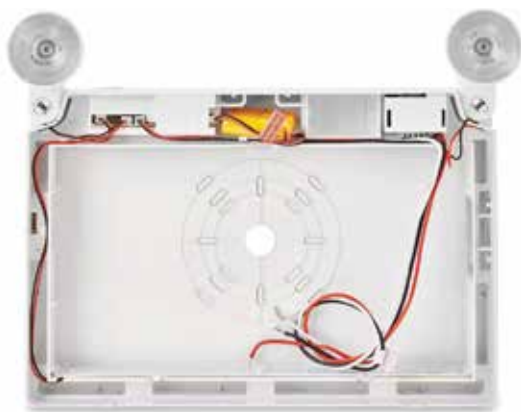




H3™

Running Man Combo Exit Sign

Dimensions

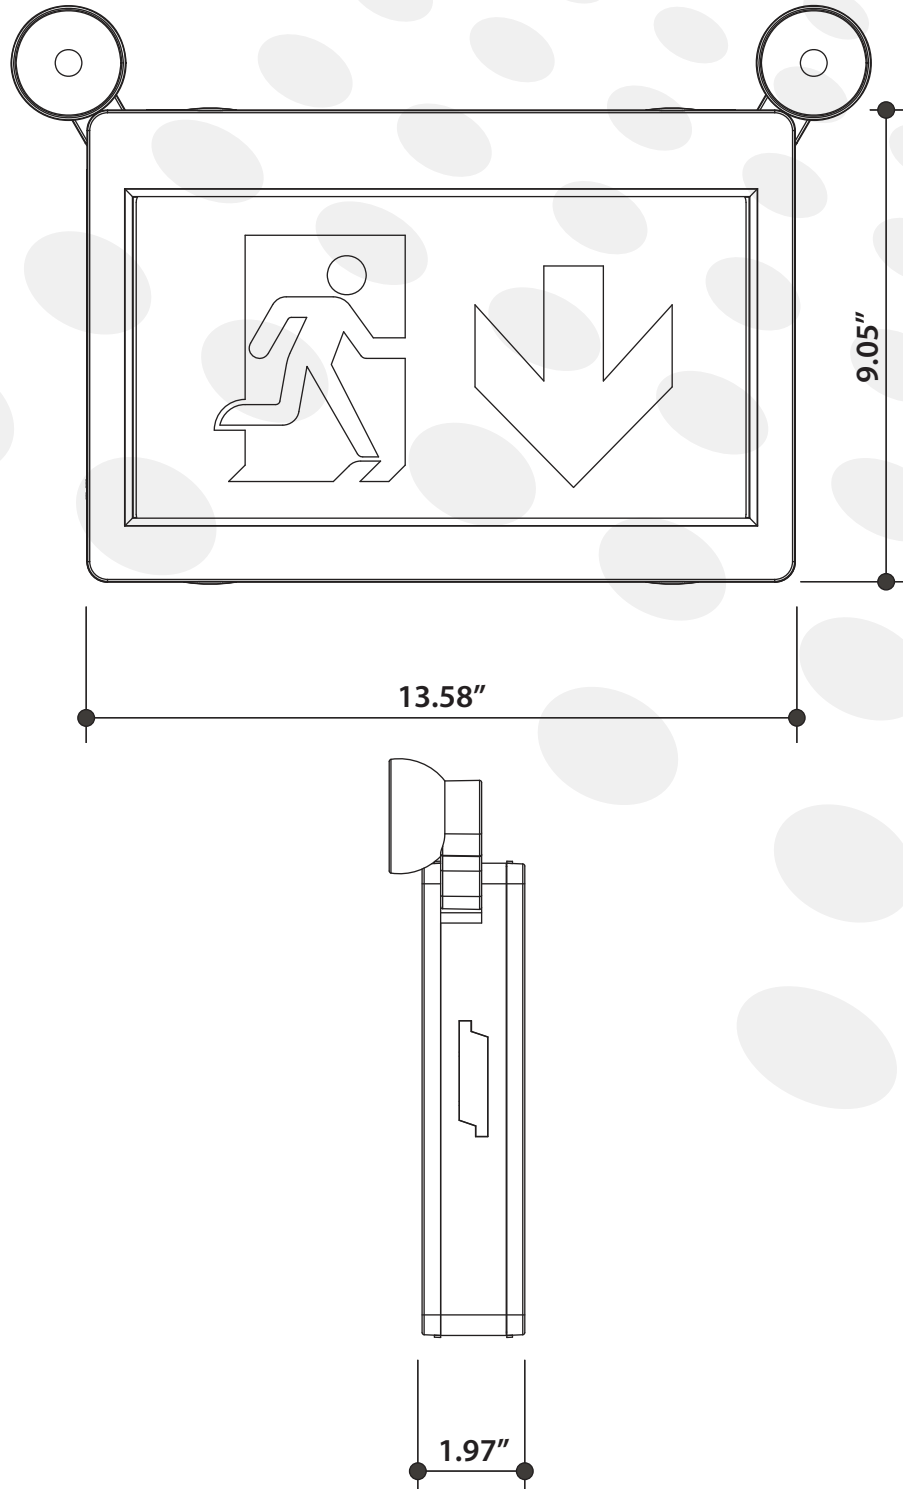




Installation

PICTOGRAM EXIT SIGN AND EMERGENCY LIGHT COMBINATION

IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Review the diagrams thoroughly before beginning.
2. All electrical connections must be in accordance with local codes, ordinances, and the National Electric code.
3. Disconnect power at fuse or circuit breaker before installing or servicing.
4. Do not use outdoors.
5. Do not mount in hazardous locations, or near gas or electric heaters.
6. Do not let power cords touch hot surface.
7. Equipment should be mounted in locations and at heights where it will not be subjected to tampering by unauthorized personnel.
8. The use of accessory equipment not recommend by the manufacturer may cause an unsafe condition.
9. Do not use this equipment for other than intended use.
10. All servicing should be performed by a qualified personnel only.
11. Allow battery to charge for 24 hours before first use.

Use Flexible Conduit Only



SAVE THESE INSTRUCTIONS WIRING DIAGRAM (See Fig 1)

AC Wiring

Connect the white wire to neutral.
If using 120V, connect the black wire to the hot lead.
If using 347V, connect the red wire to the hot lead.
Cap the unused lead.



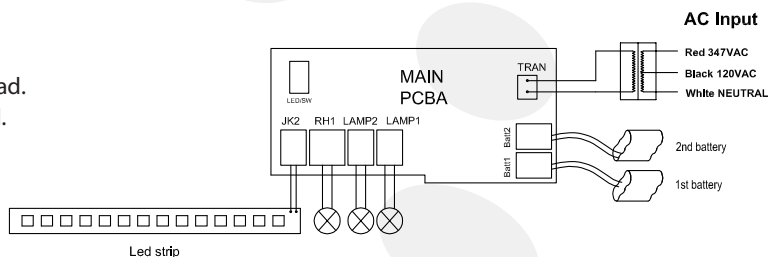



Fig 1

Assembly Lamp Heads (See Fig 2)

1. Open front cover by flat screwdriver.
2. Insert the lamp heads at the corners of main frame. Select direction of lamp head before inserting.
3. Connect male connector on lamp head to female connector on PCBA.

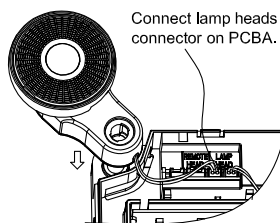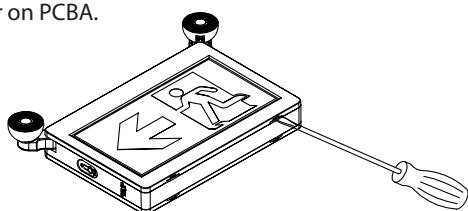

Lamp Head (Forward)

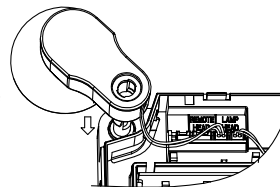

Lamp Head (Backward)

Fig 2



H3™

Running Man Combo Exit Sign

Installation

Mounting Instruction, The fixture suitable for wall mounting, side mounting, ceiling mounting.

1. Open front cover and assemble 2 pcs lamp heads on the frame.
2. Knockout appropriate mount screw hole and cable hole, mount back plate on the wall after feed building AC supply cable into back plate (see Fig 3).
3. For ceiling and side mounting purpose, remove the mounting hole cover on the top or side of the unit, assemble the canopy (see Fig 4,5,6).
4. Attach crossbar to junction box, set the longer blade of crossbar touching the J-Box.
5. Route the proper wires through mounting hole out of housing.
6. Make electrical connections inside the J-Box as wiring diagram.
7. Push excess wire into J-Box, use screws tighten canopy to crossbar so that canopy is securely fastened and tight against the wall.
8. Attach battery connector to PC board, restore front cover on unit, adjust position of lamp heads as need.
9. If pictogram direction assembled not suitable, pictogram can take out for change direction or replace pictogram, and then insert into the diffuser easily (See Fig 7).

Side Mounting

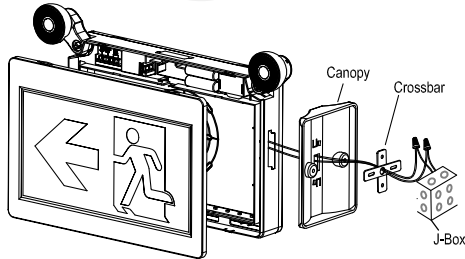


Fig 4

Canopy Assembly



Fig 6

Insert canopy into housing at 20-degree angle and twist. Quick snap is now locked firmly.
CAUTION: Trying to remove canopy is locked in place may cause damage.

Connecting Remote Heads (see Fig 8)

Using 1 pc battery, no remote capability.
 Using 2pcs battery with remote capability.
 Connect remote heads extension wire to remote wire, yellow is positive (+), purple is negative (-). connect wires using wire nuts. Remote capability reference below:
 KDR-880-(HO)2RC has max. 3.6V 2W remote capabilities.
 KDR-880-4RC has max. 3.6V 4W remote capabilities.

Wall Mounting

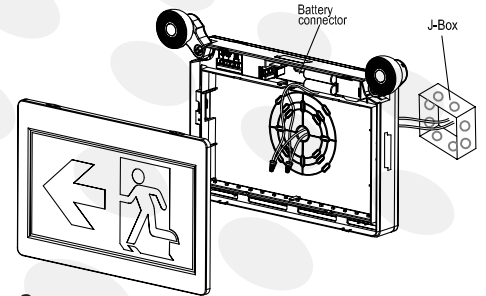


Fig 3

Ceiling Mounting

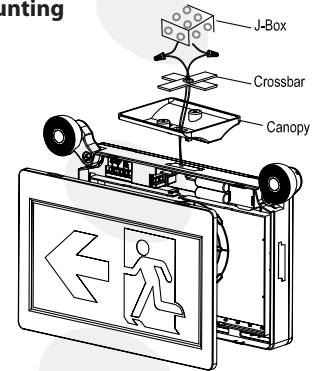


Fig 5

Change Direction of Pictogram

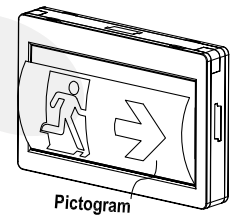


Fig 7

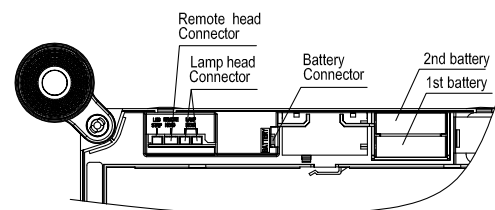


Fig 8



Application Picture



Packaging

SKU	Box Dimension	Qty	Net Weight	Gross Weight
155391	14.37" x 9.76" x 6.14"	2 Pcs/Box	5.51LBS	6.28LBS

Warranty

Five years warranty for the electrical parts and housing;
Three years warranty for battery. For complete warranty details,
[Click Here.](#)